Drum Installation Guide

A WARNING

To avoid injury, the Curb Roller must be disconnected from its power source before installing or removing drums.

- 1. Lift the frame over the drum shaft. On the drive side, frame should be placed between the sprocket and bearing.
- 2. Bolt the bearings onto the frame. The heads of the bolts should be closest to the drum. The grease zerk should be oriented as shown in the picture for easy access.



- 3. Place the chain around the sprockets and connect with the connector link.
- 4. Tighten chain until the sag is 2% of the distance between the sprockets. Making the chain too tight may result in damaging the chain and sprockets. Tighten the motor bolts.





5. Attach the chain cover.



6. Install the drum sweep assembly using the three wing nuts. Note: drum sweep can be trimmed with utility knife to fit drum.




1. Remove the drum sweep assembly using the three wing nuts.



- 2. Remove the chain cover.
- 3. Loosen tightener bolt and all four of the motor bolts to loosen the chain.



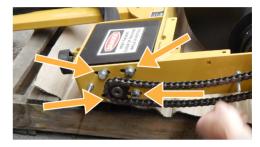

4. Remove the chain from the drum sprocket by taking apart the connector link.



5. Unbolt both drum bearings from the frame.



6. Lift the frame off of the drum shaft.





To watch a video for installation and removal of drums, please visit: www.curbroller.com/videos © 2021 Curb Roller, LLC